


1019

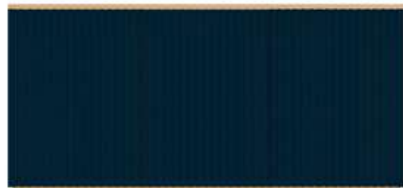

5011



7003



7040



3005



5020



7016



9001



3007



6004



7031



9003




5008



6009



7037

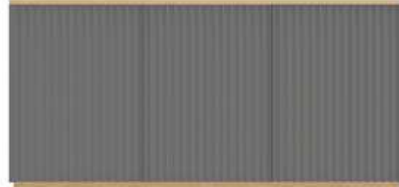

Цвет цоколя: WS 01 (Светлый дуб)

1019



5011



7003



7040




3005



5020



7016

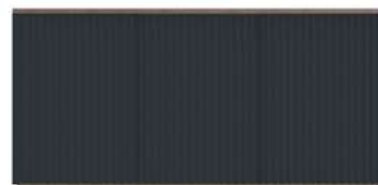

9001



3007



6004



7031



9003



5008



6009



7037



Цвет цоколя: WS 02 (Вишня)

1019



5011



7003



7040




3005



5020



7016

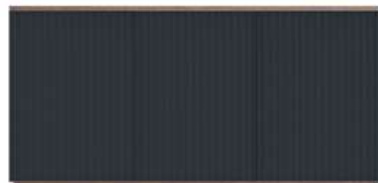

9001



3007



6004



7031



9003



5008



6009



7037



Цвет цоколя: WS 03 (Темный орех)

1019



5011



7003



7040



3005



5020



7016



9001



3007



6004



7031



9003



5008



6009



7037



Цвет цоколя: WS 06 (Белый дуб)