

ASSEMBLY INSTRUCTION

3072-CP1711-1764

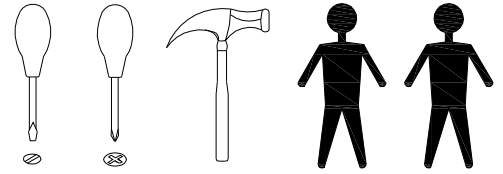
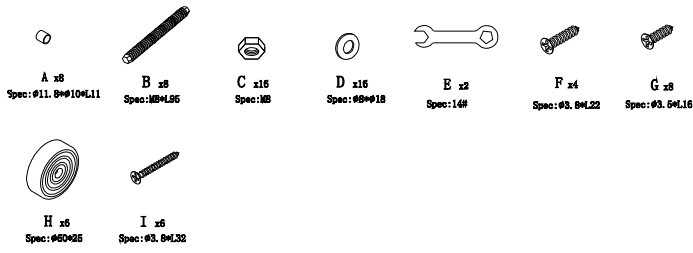


FIG. 1

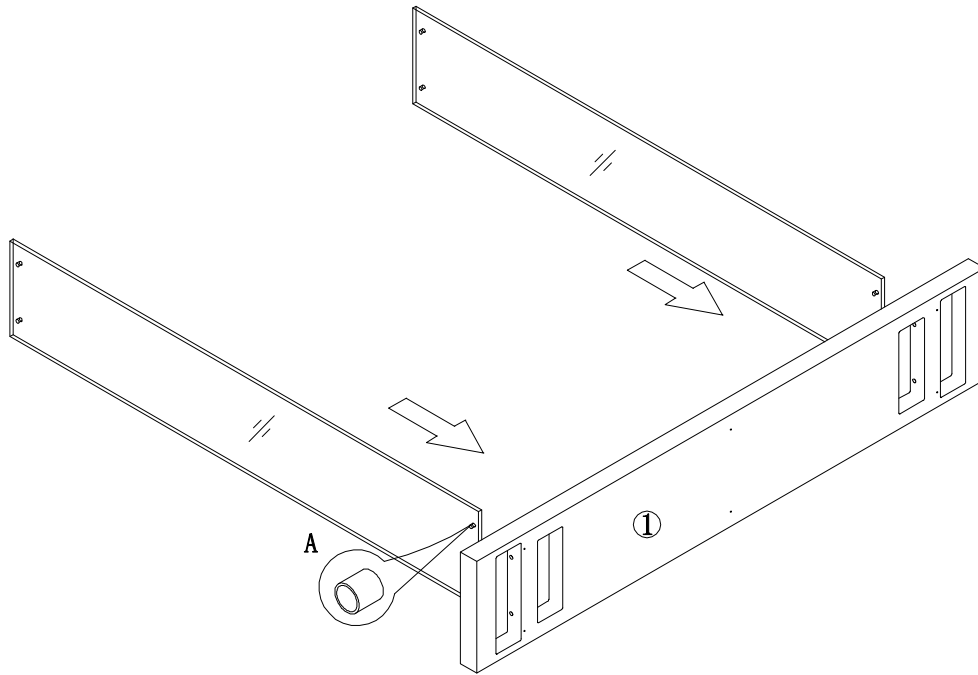


FIG. 2

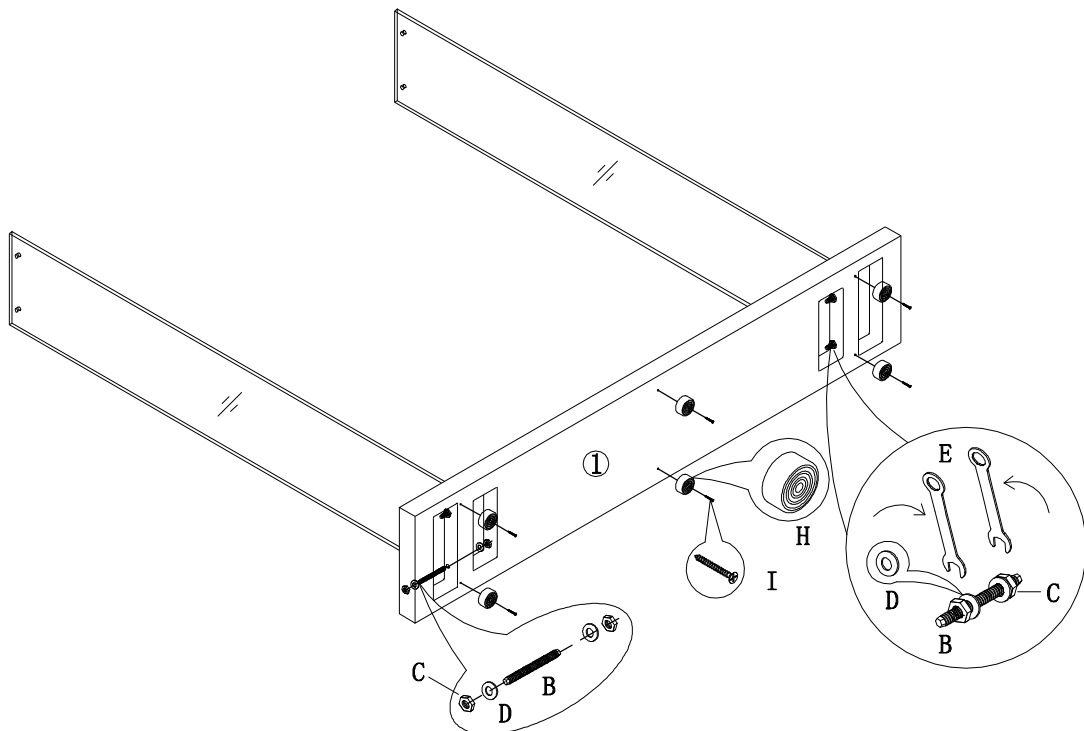


FIG.
3

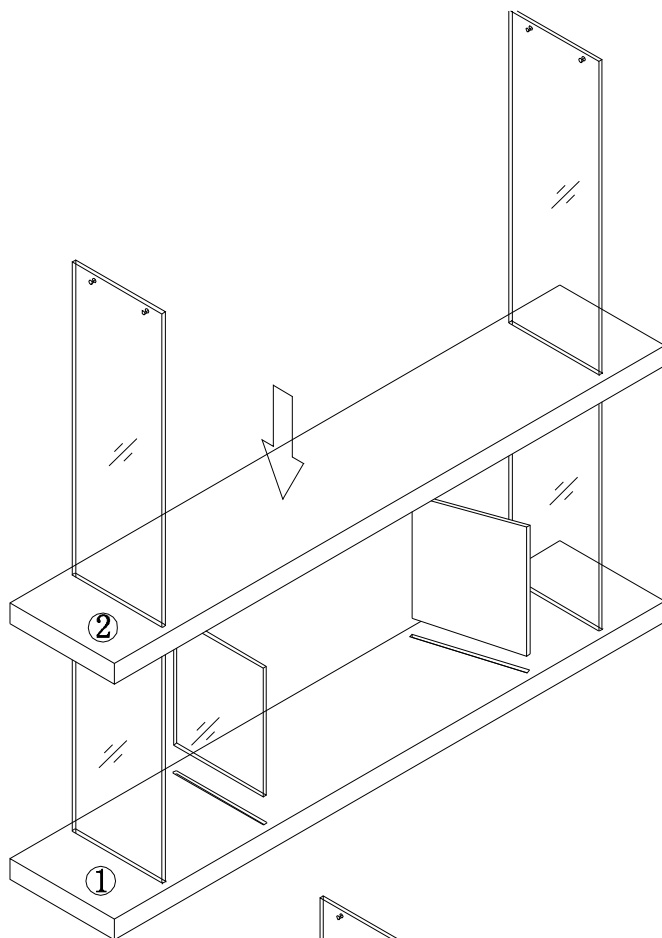


FIG.
4

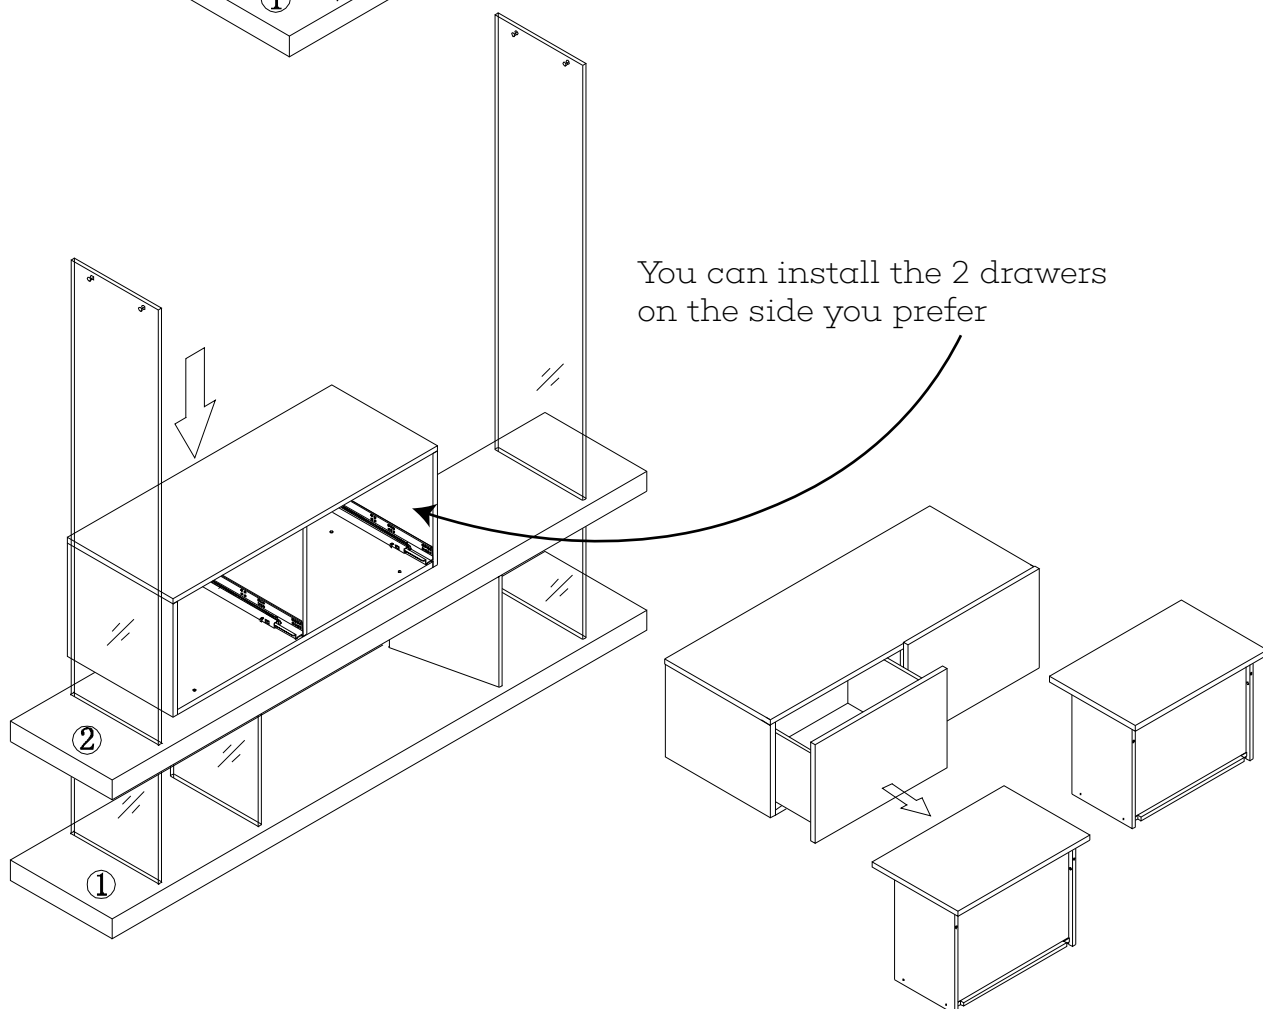


FIG.
5

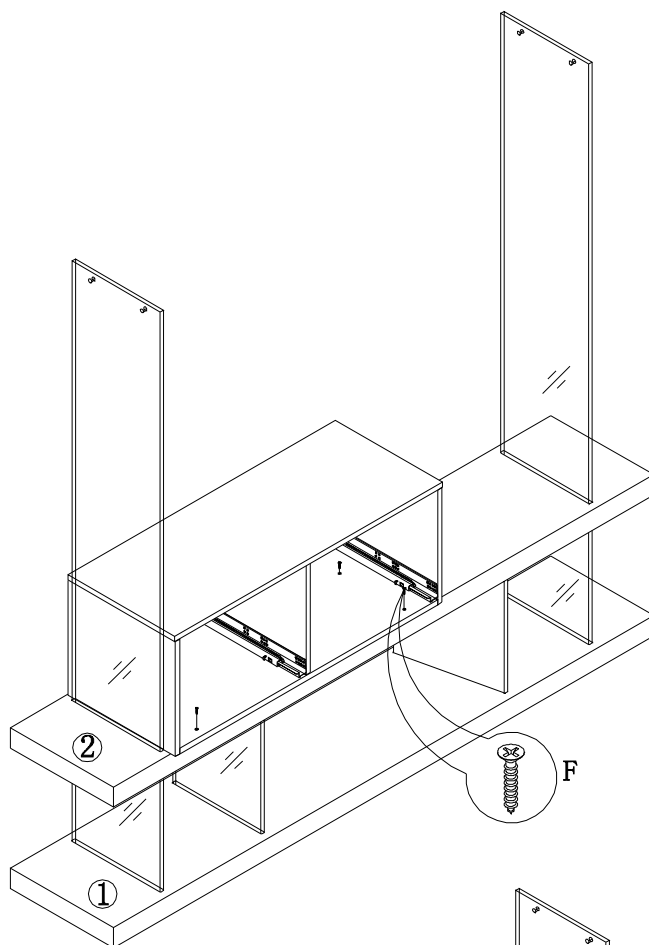


FIG.
6

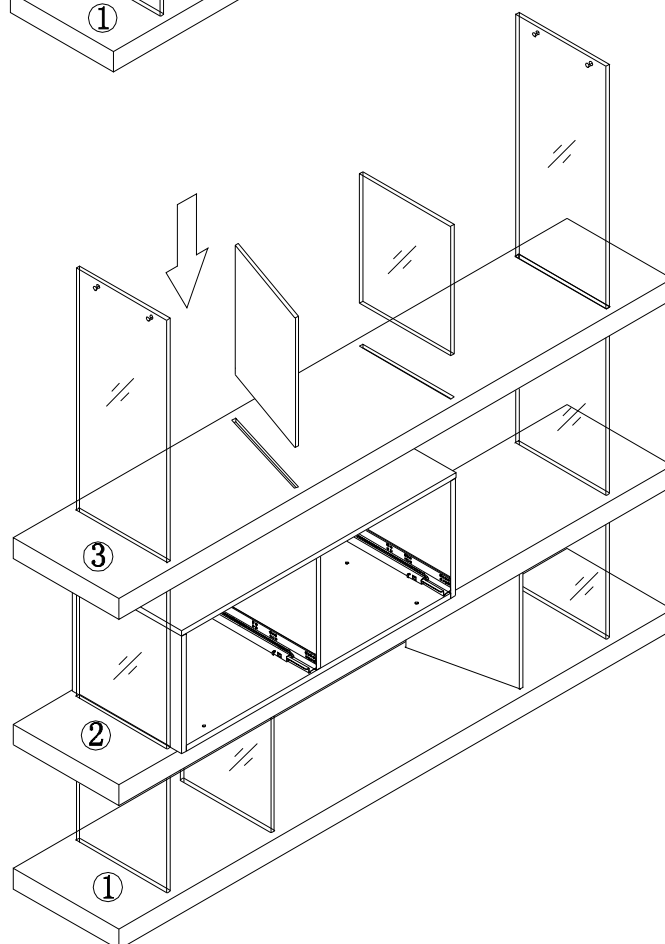


FIG.
7

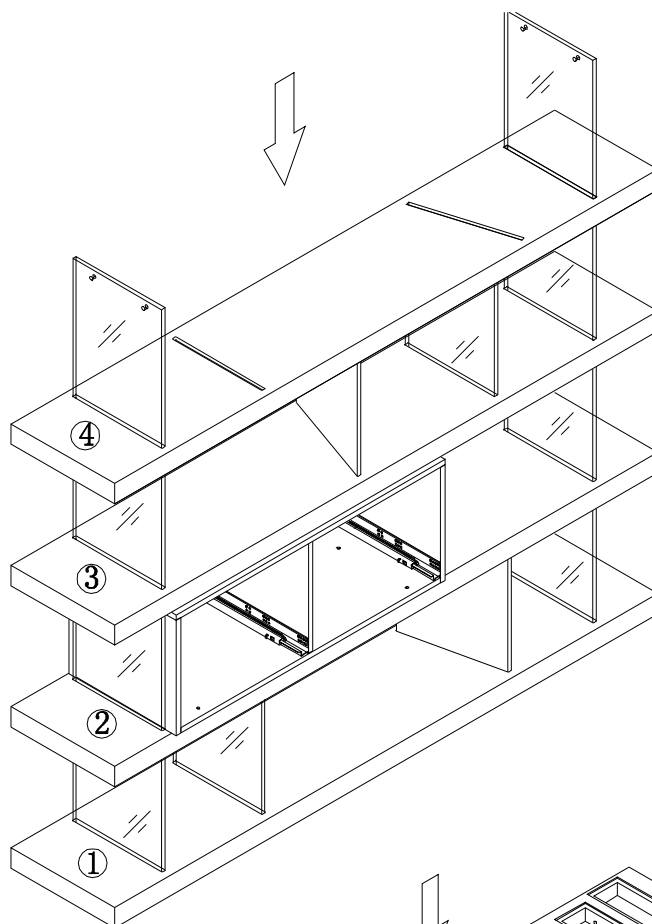
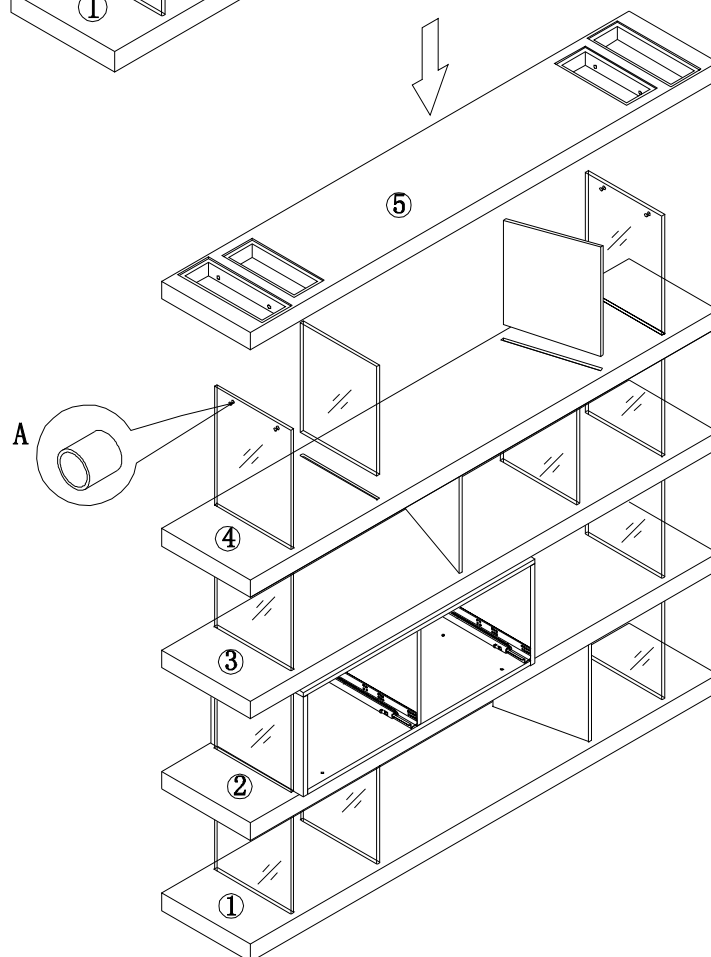
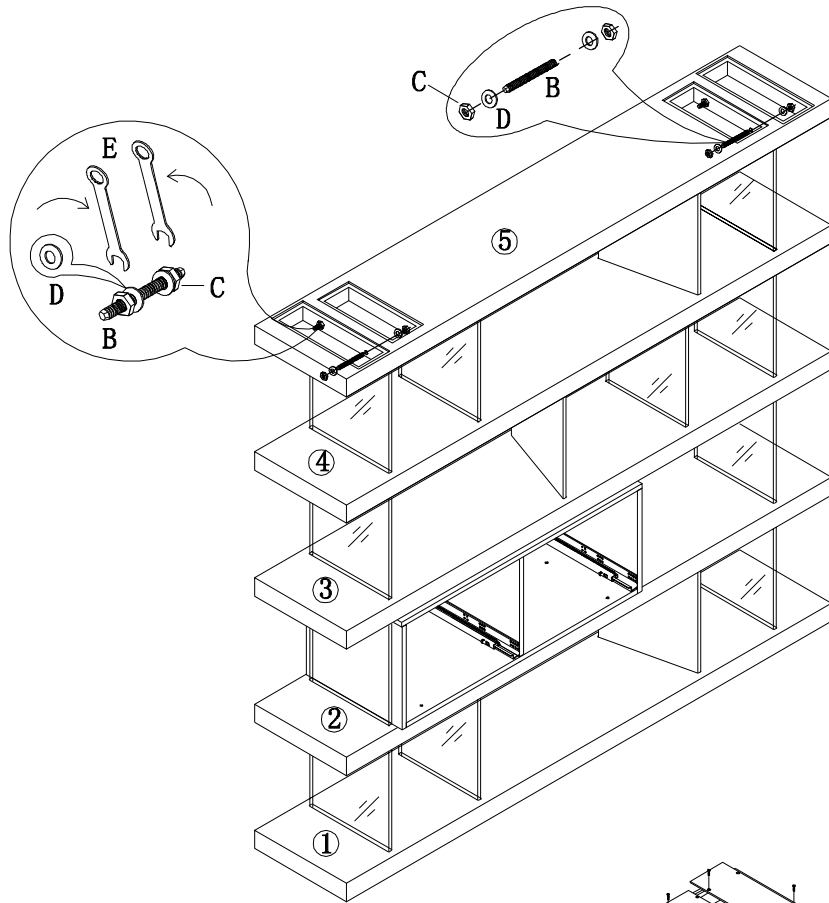


FIG.
8



**FIG.
9**



**FIG.
10**

