



25 min



x2




x1




Ax2



Bx2 (ø15x13,5)



Cx8 (ø8x30)



Dx4 (M6x15)



Fx1 (M4)




(1)x1




(2)x2



(3)x1

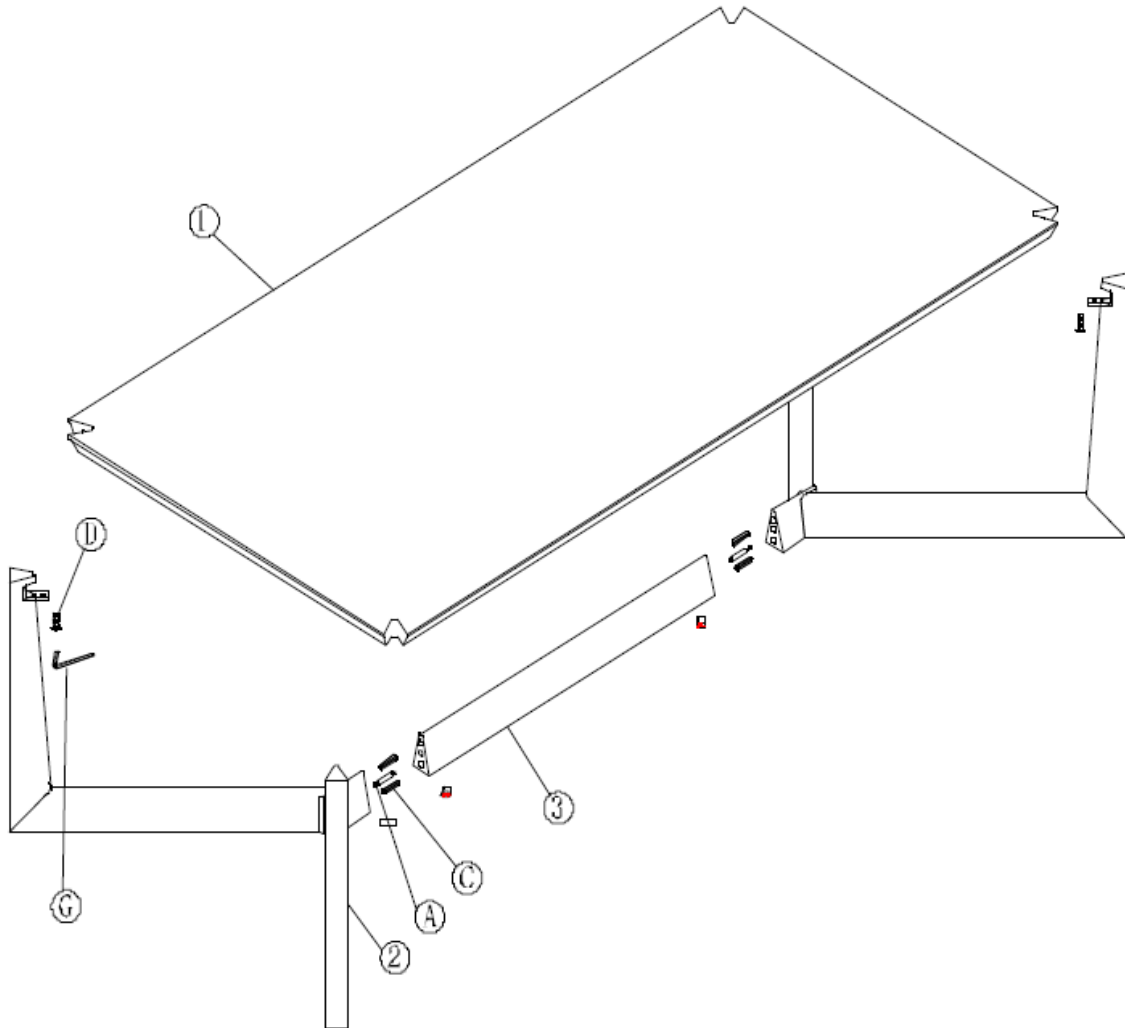

1

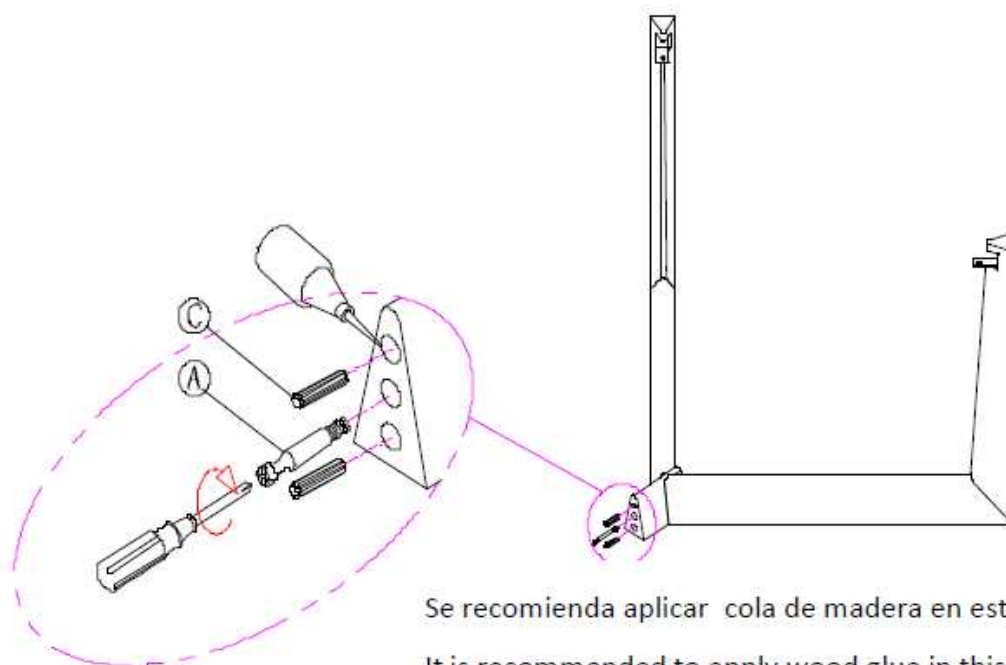


Se recomienda aplicar cola de madera en este paso.

It is recommended to apply wood glue in this step.

Recommandé d'appliquer colle à bois dans cette étape.




2

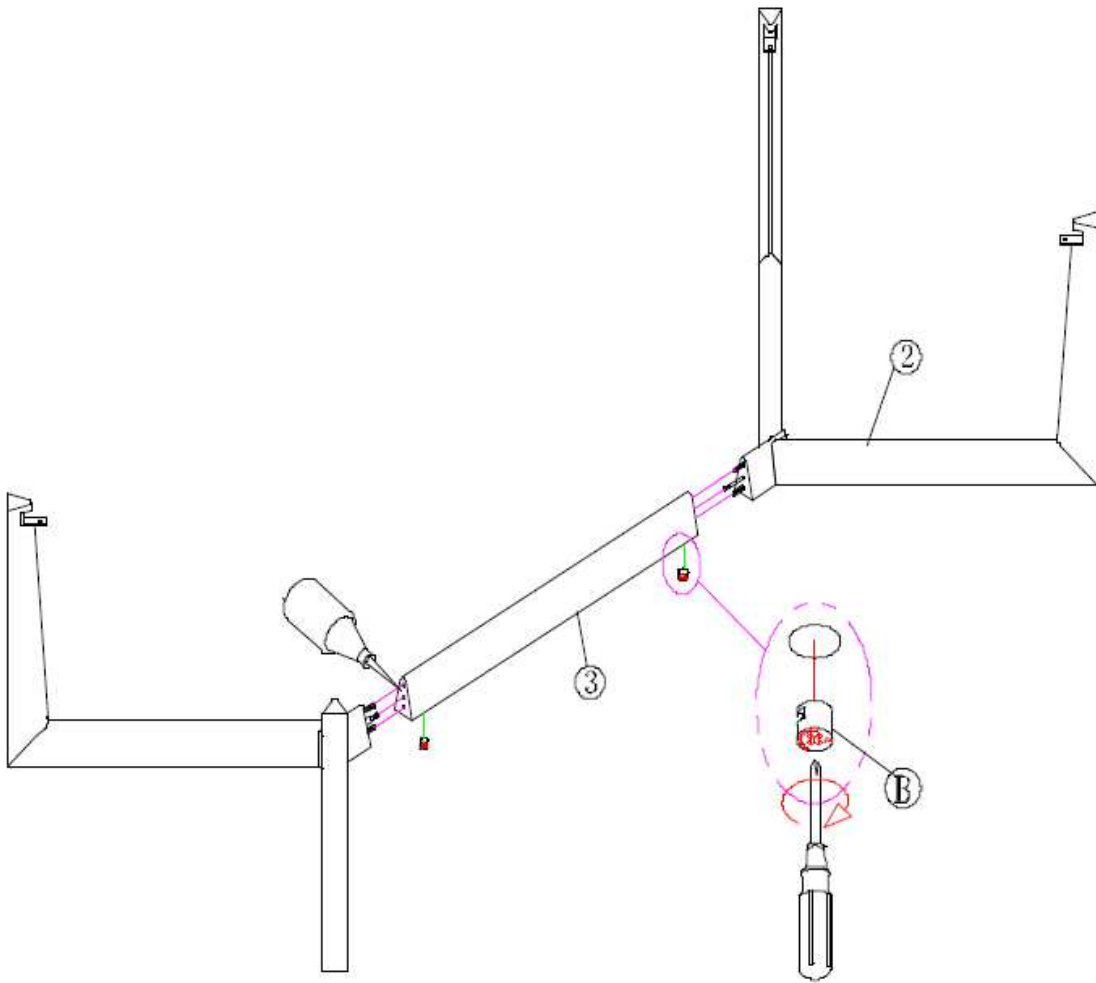



3

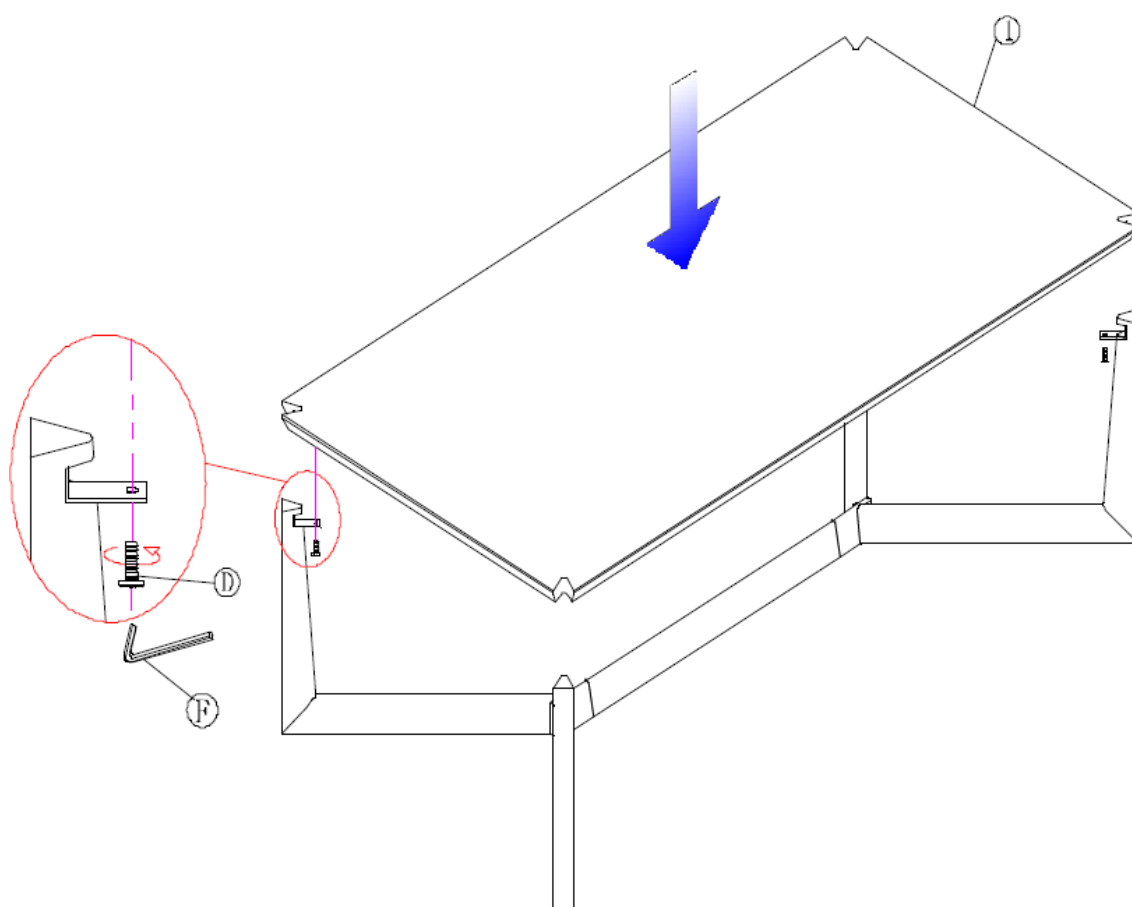

JULIÀ GRUP Furniture Solutions S.L.

B-17616277

Pol. Ind. Bosc d'en Cuca

C / Tallers, 14

17410 Sils SPAIN

contact@kavehome.com